

Pipe clamp

Pipe clamp system for single lines OD75-125mm for pre-insulated piping system Flexalen®600

Application Instruction

Application conditions and pipe preparation

- Ambient temperature: +5 to +40°C
- Service pipe is free from dirt and condensation.
- Connected indoor pipe installation must be anchored as well.



Required Tools

Screw wrench and/or adjustable spanner wrench, torque wrench.




Cleaner



Tissues

Assembling:

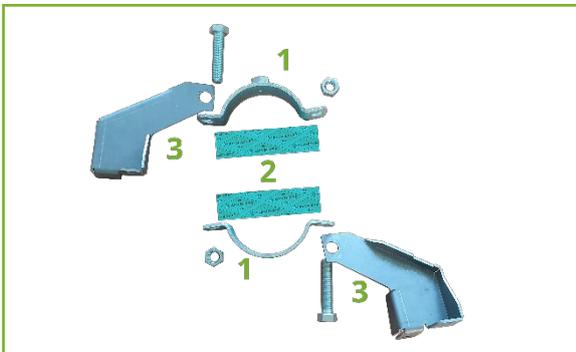

In the box

Parts:

- 1: Pipe clamp galvanized (1x)
- 2: 2 x Klingersil sheet packing (100*50 mm)
- 3: Console big type. (x2)
(4 mm thickness for 75-90 and 110 PB, 6mm thickness for 125 PB)



Picture 2

Clean all parts and the pipe, so everything is free from debris. Assemble the parts like in **picture 2**, take care that the clamp is tightened symmetrically, with the feet of the console standing flat on the floor/wall and the sheet packing between pipe and clamp.

Disclaimer

All recommendations and information provided on this data sheet are based on our knowledge and experience. Product specifications are intended as guidelines. Since conditions of service are beyond our control, users must satisfy themselves that products are suitable for the intended use. No guarantee or warranty is given or implied or that any use of the products will not infringe rights belonging to other parties. We reserve the right to change product design and properties without notification.



Picture 3

During assembly, watch the symmetric setup of the bolts and the side to which the console is fixated. This way it is always tightly pressed against the clamp.



Picture 4

After partly tightening, mark the spots on the floor/wall to drill holes/install fixations. After installing the fixations (not included in the box), fixate the consoles to the wall and re-assemble the clamp on the pipe. Tighten symmetrically with a torque of 80Nm (see **picture 5**).



Picture 5

Disclaimer

All recommendations and information provided on this data sheet are based on our knowledge and experience. Product specifications are intended as guidelines. Since conditions of service are beyond our control, users must satisfy themselves that products are suitable for the intended use. No guarantee or warranty is given or implied or that any use of the products will not infringe rights belonging to other parties. We reserve the right to change product design and properties without notification.